Shenzhen ABT Power CO., LTD. Email:sales@abt-power.com Http://www.abt-power.com									
SPECIFICA	TION	PREPARE	CHECK	APPROVE					
MODEL:	USED IN:								
ISSUE DATE :	4/22/2013 8:55:00 PM								
COMMON/UNITE	DOC. NO:		REV.: 1.0	PAGE: 1 OF 2					

BG1F-4 12.8V (4S) LiFePo4 Battery Fuel Gauge						
No.	Item	Unit	Specification	Remark		
Specifi	ication			-		
01	Rating Input Voltage	V	DC 8~13V			
02	Suitable battery type		12.8V 4s LiFePo4			
03	Max. Charge/Discharge Current permitted.	A	No Limitation.	This value depends on the external Current sensor wired with battery negative, see attached drawing.		
04	Current sensor resistor value recommended. (Series in negative path)	Ω	0.005for 20A~50A working current.0.01for 5A~20A working current.0.05for 1A~5A working current.			
05	Working Consumed Power	mA	5			
06	OFF Status leakage current	mA	1	Push "On" button.		
07	Fuel gauge display tolerance	%	+- 20%			
Fop Vi	iew and Illustration					
		Battery	10% 60% 100% y Fuel Gauge LED			
Install						
	ke sure the battery you wired is					
	nect the RED WIRE with your inect the BLACK WIRE with yo	•	1 I /			
Th If y nee 4. Con	e recommended value of this cur you have a BMS in your battery- ed to do above job. nnect the GREEN WIRE with tl	rrent se -pack,	nsor is 0.005~0.05 ohm, depended on	r resistor on this BMS, then you do not		
E1 <i>Cautio</i>	nd of installation.					
		e conne	cted properly, if not the charging an	d discharging status and fuel gauge wi		
	reversed and in correct.					

Shenzhen ABT Power CO., LTD. Email:sales@abt-power.com Http://www.abt-power.com								
SPECIFI	CATION	PREPARE	CHECK	APPROVE				
MODEL:	USED IN:							
ISSUE DATE :	4/22/2013 8:55:00 PM							
COMMON/UNITE	DOC. NO:		REV.: 1.0	PAGE: 2 OF 2				

